

WebDAQ DT5828

Internet Enabled Thermocouple Logger



Remote Configuration and Monitoring

Virtually Unlimited Storage

Integrated HW and SW



Flexible Triggers,
Alarms, Events,
Email and SMS Text
Notification



Built-in Web Server,
Easy-to-Use

WebDAQ DT5828

Internet Enabled Thermocouple Data Logger



The WebDAQ DT5828 intelligent logger features remote monitoring and control of real-time temperature data.

Overview

The WebDAQ DT5828 is a stand-alone, temperature logger designed for remote monitoring and control. All the intelligence is built into the WebDAQ, eliminating the need for a PC or additional software. By using the embedded WebDAQ web server, users can easily configure simple or sophisticated applications, log temperature data, update digital outputs and/or send notifications based on alarm conditions, and view real-time data from any location and any device with a web browser.

The WebDAQ DT5828 provides 16 isolated thermocouple inputs, and four isolated digital bits that can be used as trigger inputs or alarm outputs. Housed in a heavy-duty chassis, the WebDAQ DT5828 is rugged enough for industrial applications.

Integrated Software and Hardware

The WebDAQ Series embedded OS and web server provides an all-in-one package for stand-alone data logging and alarming. Users can monitor and control their applications from anywhere with a web browser.

The WebDAQ web server is optimized for both desktop and mobile use. Users can perform data acquisition tasks from phones, tablets and laptops with a single, intuitive user interface.

WebDAQ Web Interface

An embedded web server provides a clean, intuitive interface to access all configuration and data management tasks.

Hardware, trigger and alarm settings are contained in a single task, or “job”. Multiple “jobs” can be run in a “schedule” for more complex data logging applications.

For example, users can create a schedule of jobs in which one job automatically runs after an alarm condition is triggered on a different job, such as when a temperature is reached or when a digital input changes.

Remote Access and Control

Install the WebDAQ DT5828 on any network and access it using any device with a web browser to remotely monitor and control all operations. Users can connect a WiFi adapter to the rear panel and communicate with the WebDAQ over a wireless network.

Features

- 16 thermocouple inputs
 - Isolated to 250 V
- Four isolated DIO for triggers and alarms
- Log data to internal storage or mapped network storage
- Share folders to view files over a local network
- Export data to csv, UFF, or binary for use in other applications
- Alarm and event notifications with email and SMS messaging
- Easy, flexible task scheduling
- Configurable read/write access
- No driver software to install
- Built-in web server
- Remote monitoring and control
- WiFi support

Flexible Triggering

Start or stop the acquisition based on analog or digital thresholds, alarm states, or date/time values. On-demand push button triggering is also supported.



Device-independent operation lets you remotely monitor and control the WebDAQ DT5828 from any device with a web browser.

Easy Setup – Powerful Capabilities

Jobs are the building block of WebDAQ. The ability to define different data logging jobs, or tasks, and add them to a schedule unleashes flexibility not seen in any other data logger.


Whether you want to set up a simple logging task or a complex task, jobs and a schedule make it easy and straightforward.

What is a Job?

The basic building block of WebDAQ, a job defines channel configuration, logging options, start and stop conditions, and alarming.

What is a Schedule?

A schedule is a collection of jobs that gives flexibility to dynamically change data logging attributes, such as sampling rate, active channels configuration, or alarm levels.

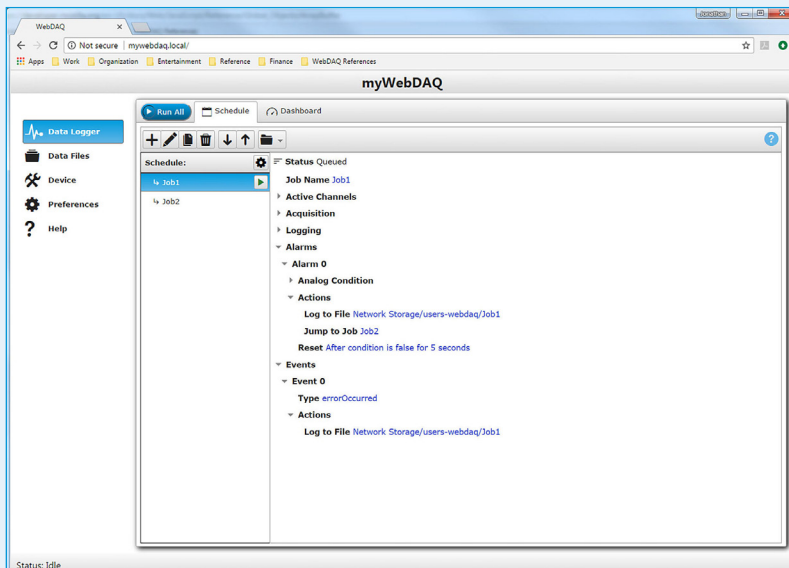

Example:


Switching from static acquisition to dynamic acquisition.

1 Schedule and 2 Jobs

Users can easily setup a job for a slow, static acquisition and a fast dynamic acquisition. When a trigger condition is met (i.e. over/under alarm), Job 1 (slow acquisition) ends and Job 2 (fast acquisition) begins. When the trigger condition returns to normal, job 1 can be restarted.

Clear, Concise, Data Displays

WebDAQ users don't need to rely on the small screens and difficult to navigate displays of most other loggers. With WebDAQ's intuitive web interface, users can easily see their data and alarm conditions in real time or after the acquisition is complete.

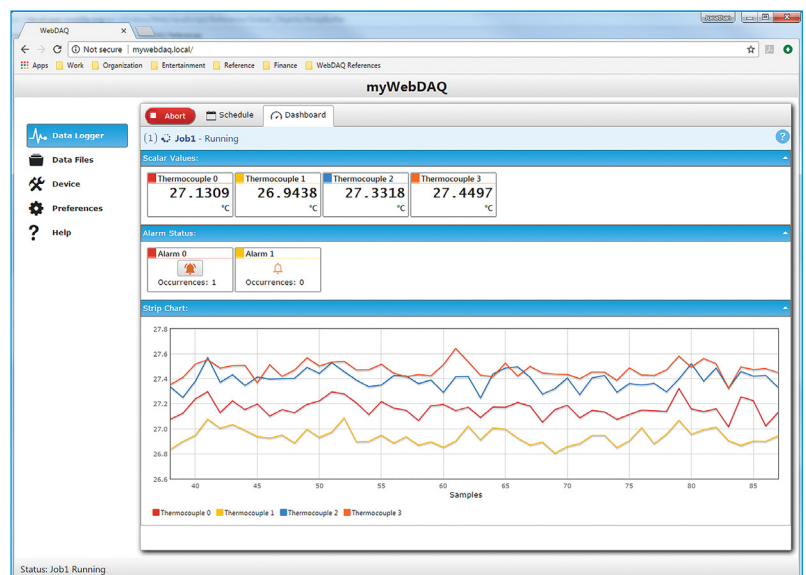

Features

Alarm and Event Notifications

Create multiple alarms using analog or digital channel sources. Configure alarms to reset and re-arm when the condition clears, or reset them remotely with your browser. View the alarm status on the web interface.

Users can configure one or more events to record when a job is started, stopped, or triggered, or if an error condition is detected.

Receive alarm and event notifications on one or more addresses using email and SMS messaging.

Virtually Unlimited Storage

Store data files and configuration settings locally in internal flash memory, or save to external media or network folders.

Users can map a network drive or FTP server as the location to log data or store files.

Easily transfer files between WebDAQ storage locations and mapped network storage locations.

Share Folders

Users can share a WebDAQ storage location or specific folder over a local network.

Real-Time Data Display

View data as it is acquired or from a stored file. Users can specify a range of data to view and zoom in or out. Data is plotted on strip chart and scalar displays.

Control Read and Write Access

Users can control who can view and modify job settings by defining a password and setting the security level for the admin account. A “share” password can be used to access a shared folder or FTP server running on the WebDAQ.

Run the Schedule on Startup

Automatically run the schedule when the system starts up. Multiple jobs in the schedule are run consecutively.

Real-Time Clock

A real-time clock provides an absolute time reference for time-stamping data. The clock can be set to any timezone, and may be synchronized to the internet time server.

Isolated Thermocouple Inputs

The WebDAQ DT5828 provides up to 16 thermocouple channels. Type J, K, T, E, N, B, R, and S thermocouples are supported. Thermocouple inputs are isolated from ground. Overvoltage protection is provided between any two inputs.

CJC and Auto Zero Support

Cold junction compensation (CJC) is enabled for all channels. Users can enable an auto zero channel to compensate for offset errors.

Isolated Digital I/O

The four isolated digital I/O lines can be used either as triggers to start or stop the acquisition or as alarm outputs.

Flexible Power Requirements

Provide power with the 12 volt, 1.25 amp supply that ships with the device*, or connect to any 6 to 16 DC supply.


Firmware Updates

Device firmware is bundled with the operating system and web server in one update file. This allows the WebDAQ DT5828 to be updated in the field.

Calibration

The WebDAQ DT5828 is factory-calibrated using a NIST-traceable calibration process. Specifications are guaranteed for one year. Return the device to the factory for recalibration.

* Japan only

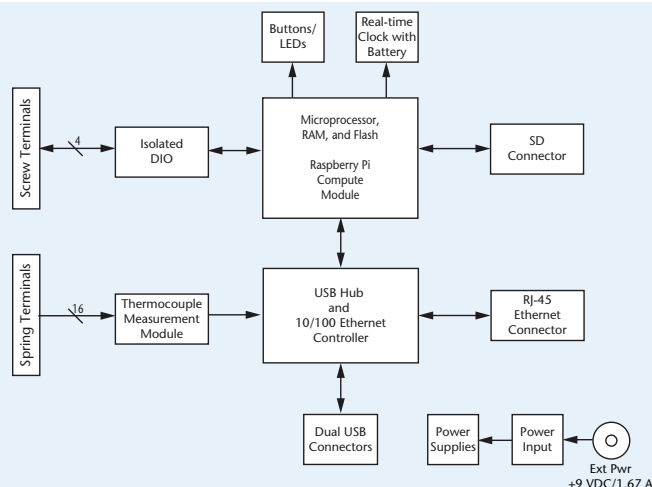


WebDAQ DT5828

Front and Rear Panels




Front Panel

Detachable spring and screw terminals allow quick thermocouple and digital connections.

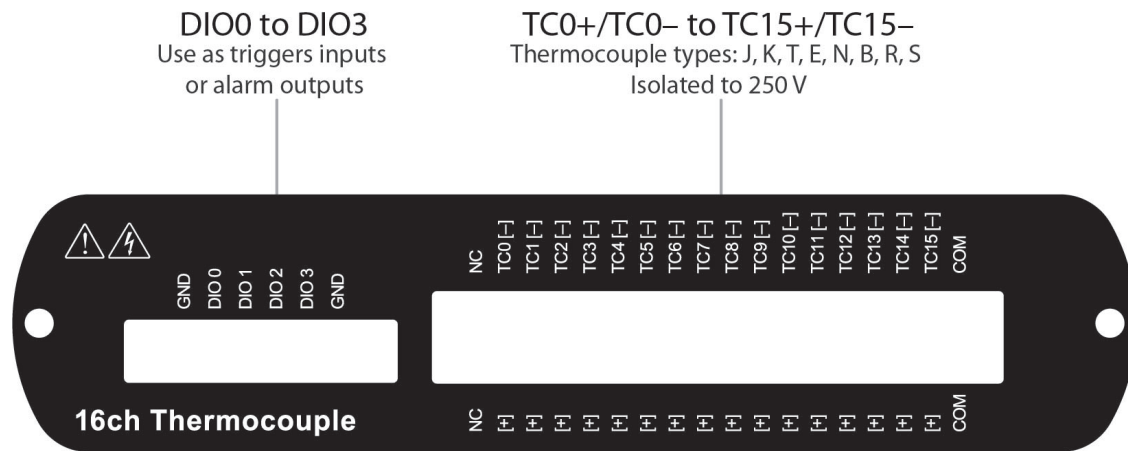

Rear Panel

The rear panel provides Ethernet and power connections, LED indicators, dual USB ports, one SD card slot, buttons, and a ground connector.

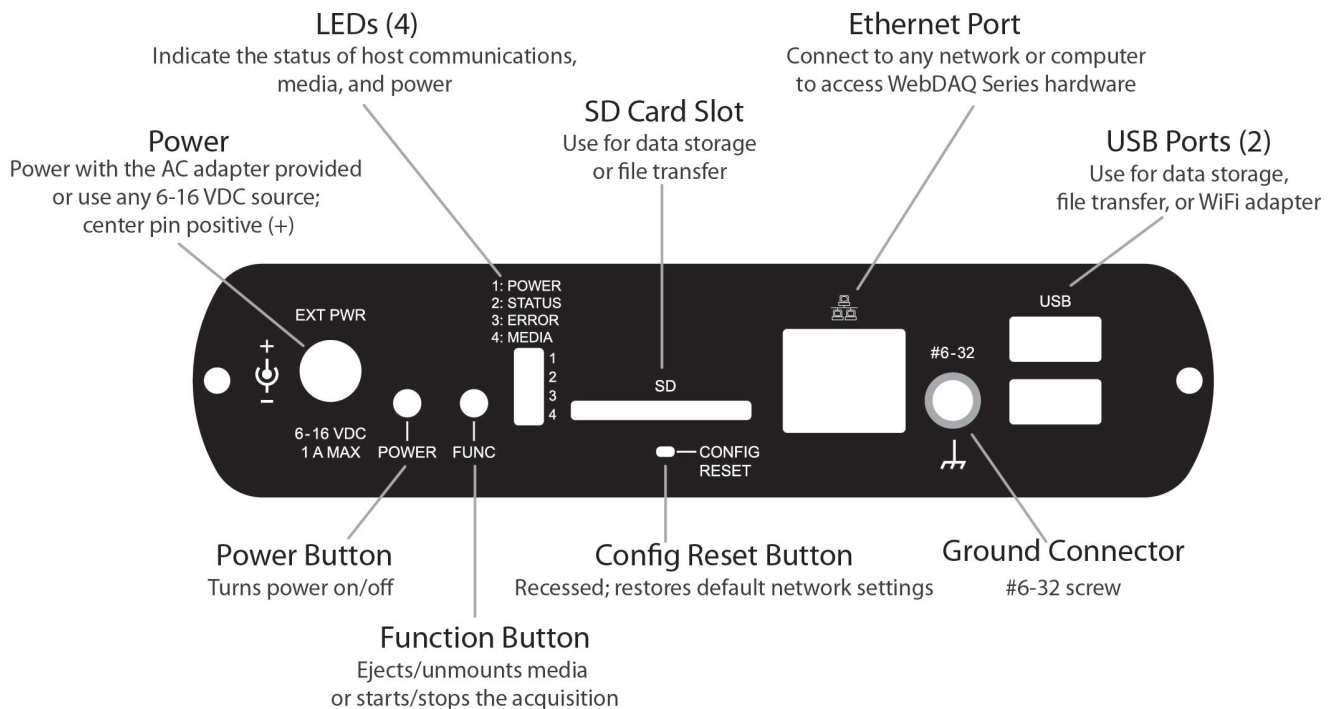

All specifications are subject to change without notice.
Typical for 0 °C to 50 °C unless otherwise specified.

Thermocouple input

Number of channels: 16 thermocouple channels, 1 internal auto zero channel,
1 internal cold-junction compensation channel
ADC resolution: 24 bits
Type of ADC: Delta-Sigma
Sampling mode: Scanned
Voltage measurement range: ± 78.125 mV
Temperature measurement ranges: Works over temperature ranges defined by NIST (J, K, T, E, N, B, R, S thermocouple types)

Timing Mode*			
Requested Scan Rate	Mode	Conversion Time (per channel)	Sample Rate (per channel)
≤ 1 Hz	High-resolution	55 ms	1 S/s
> 1 Hz	High-speed	740 μ s	75 S/s

* The timing mode is automatically set for either high-resolution or high-speed mode based on the requested scan rate, regardless of the number of channels.

Common-mode voltage range

Channel-to-COM: ± 1.2 V min
COM-to-earth ground: ± 250 V

Common-mode rejection ratio (CMMR)

High-resolution mode at DC and 50 to 60 Hz:

Channel-to-COM: 100 dB
COM-to-earth ground: > 170 dB

High-speed mode at 0 to 60 Hz:

Channel-to-COM: 70 dB
COM-to-earth ground: > 150 dB

Input bandwidth:

High-resolution mode: 14.4 Hz
High-speed mode: 78 Hz

High-resolution noise rejection, 50 Hz and 60 Hz: 60 dB

Overvoltage protection: ± 30 V between any two inputs

Differential input impedance: 78 M Ω

Input current: 50 nA

Input noise

High-resolution mode: 200 nVrms
High-speed mode: 7 μ Vrms

Gain error

High-resolution mode: 0.03% typ at 25 °C, 0.07% typ at 0 °C to 60 °C, 0.15% max at 0 °C to 60 °C

High-speed mode: 0.04% typ at 25 °C, 0.08% typ at 0 °C to 60 °C, 0.16% max at 0 °C to 60 °C

Offset error

High-resolution mode: 4 μ V typ, 6 μ V max
High-speed mode: 14 μ V typ, 17 μ V max

Offset error from source impedance: 0 °C to 60 °C: Add 0.05 μ V per Ω , when source impedance > 50 Ω

Cold-junction compensation accuracy: 0.8 °C typ, 1.7 °C max

Warm-up time: The device is lying flat or facing upward; constant ambient temperature: 15 minutes recommended

Temperature measurement accuracy

Measurement sensitivity represents the smallest change in temperature that a sensor can detect. It is a function of noise. The values assume the full measurement range of the standard thermocouple sensor per ASTM E230 87.

Input characteristics		
Parameter	Mode	Specification
Measurement sensitivity	High-resolution	Type J, K, T, E, N: < 0.02 °C Type B, R, S: < 0.15 °C
	High-speed	Type J, K, T, E: < 0.25 °C Type N: < 0.35 °C Type B: < 1.2 °C Type R, S: < 2.8 °C

Refer to the *Specifications* chapter of the hardware user's guide for accuracy error diagrams of each thermocouple type.

Digital input/output

Digital type: CMOS (Schmitt trigger) input / open drain output

Number of I/O: One port of 4 bits

Configuration: Bit configurable for input or output

Power on conditions: Power on reset is input mode

Pull-up configuration: Each bit is pulled up to 5 V with a 100 k Ω resistor

Input frequency range: DC – 10 kHz

Input high voltage threshold: 1.9 V min, 3.6 V max

Input low voltage threshold: 2.3 V max, 1.0 V min

Schmitt trigger hysteresis: 0.6 V min, 1.7 V max

Input high voltage limit: 15 V absolute max

Input low voltage limit: -0.5 V absolute min, 0 V recommended min

Output off state leakage current: 10 μ A max

Output sink current capability: 100 mA max (continuous) per output pin

Output transistor on-resistance (drain to source): 1.6 Ω

Network

Ethernet type: 100 Base-TX, 10 Base-T

Communication rates: 10/100 Mbps, auto-negotiated

Connector: RJ-45, 8 position

Cable length: 100 meters (328 feet) max

Network configuration

Network IP configuration: DHCP, link-local, static.

DHCP may be disabled by the user and a static IP address assigned

If DHCP is enabled but is unsuccessful at obtaining an IP address, the device will fall back to link-local and request the IP address 169.254.100.100.

Network device name: The name used for detecting the device using mDNS (zero-conf). This name may be changed using the web interface.

Network name publication: By mDNS

User accounts: *admin* and *share*. These accounts are case-sensitive and cannot be changed using the web interface.

Factory default settings

Factory default IP address: 192.168.0.101

Factory default subnet mask: 255.255.255.0

Factory default Gateway: 192.168.0.1

Factory default DHCP setting: DHCP + link-local enabled

Factory default password for admin account: *admin*. Passwords are case sensitive and can be changed using the web interface.

Factory default password for share account: *share*. Passwords are case sensitive and can be changed using the web interface.

Factory default device name: *webdaq-xxxxxx*, where xxxxxx is the last 6 digits of the MAC address (printed on the label on the underside of the device).

Note: When factory defaults are restored, any shared folders or mapped drives are reset.

USB ports

Number of USB ports: Two, for a mass storage device or approved WiFi adapter

USB device type: USB 2.0 (high-speed)

Device compatibility: USB 1.1, USB 2.0, USB 3.0

SD memory card slot

Memory card type: SD, SDHC, SDXC, MMC, TransFlash

File systems supported: FAT16, FAT32, exFAT, ext2/3/4, NTFS

Push buttons

Power (POWER): W1 jumper installed (factory default): Turns device on or off.

W1 jumper removed (device on when power is applied): Reboots the device.

Function (FUNC): Unmounts external media, or starts/stops an acquisition

Reset (CONFIG RESET): Restores network and alarm settings to factory default values.

Power

Input voltage: Center positive. 6 VDC to 16 VDC

Input wattage: 4 W typ, 10 W max

External AC adapter†: 12 VDC, 1.25 amps, 110 VAC to 240 VAC input range

Battery: One 3 V button cell lithium battery (BR1225 or CR1225); replaceable

† Japan only

WebDAQ DT5828

Ordering



Mechanical

Dimensions (L × W × H): 158.8 × 146.1 × 38.1 mm (6.25 × 5.75 × 1.50 in.)
With spring terminal: 177.0 × 146.1 × 38.1 mm (6.97 × 5.75 × 1.50 in.)
Weight: 635 g (1.45 lb)

Environmental

Operating temperature range: 0 °C to 50 °C max
Storage temperature range: -40 °C to 85 °C
Ingress protection: IP 30
Humidity: 10-90% RH, noncondensing (Operating), 5-95% RH (Storage)
Maximum altitude: 2,000 m (6,562 ft)
Pollution Degree: 2

The WebDAQ DT5828 is intended for indoor use only, but may be used outdoors if installed in a suitable enclosure.

Order Information

Hardware

Part No.	Description
WebDAQ DT5828	Internet enabled data logger with 16 thermocouple inputs and 4 DIO lines, embedded operating system and web server. External power supply included*.

* Japan only

Accessories

Part No.	Description
ACC-205	DIN-rail mounting kit; requires the ACC-404 panel/wall mounting kit.
ACC-402	36-position detachable spring terminal.
ACC-403	6-position detachable screw terminal (2).
ACC-404	Panel/wall mounting kit; use with the ACC-205 to mount on a DIN rail.
PS-9V1AEPS230V	9 VDC, 1.67 A replacement power supply; interchangeable plugs available separately.